

MF11 / Drawing atlas

Dimensions & installation

Independent views grouped by motor installation.

Drawing unit unverified; original dimension labels are retained.

Reference dimensions; confirm mounting and stroke for your configuration.

Use labelled dimensions; do not scale the drawings.

C outside

5 views | pp. 2-4

D inside

5 views | pp. 5-7

L left

5 views | pp. 8-10

R right


5 views | pp. 11-13

Product specifications and selection guidance are supplied separately.


For configuration-specific dimensions or actual CAD files, contact HTROBOT.

MF11 / C outside


View 1

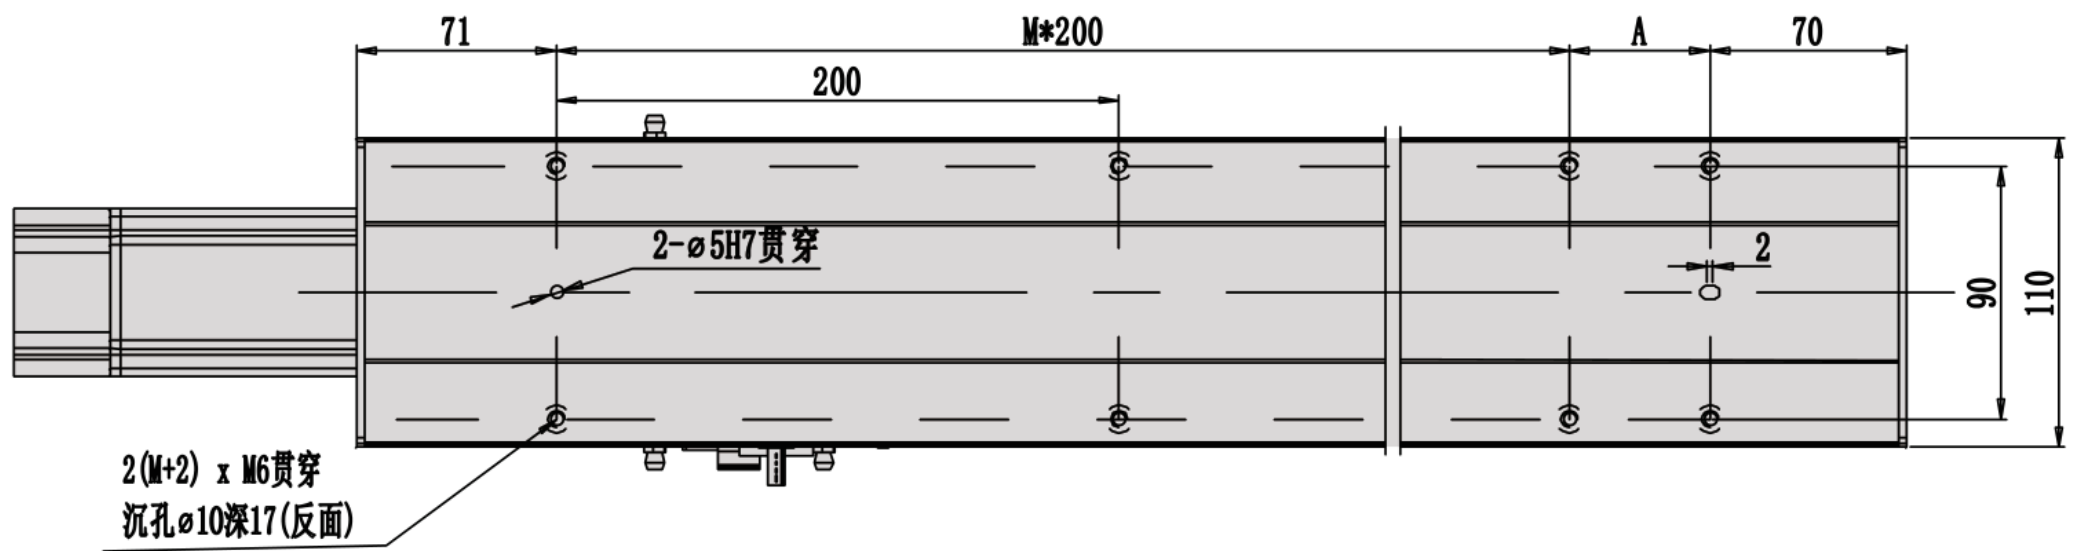

View 2

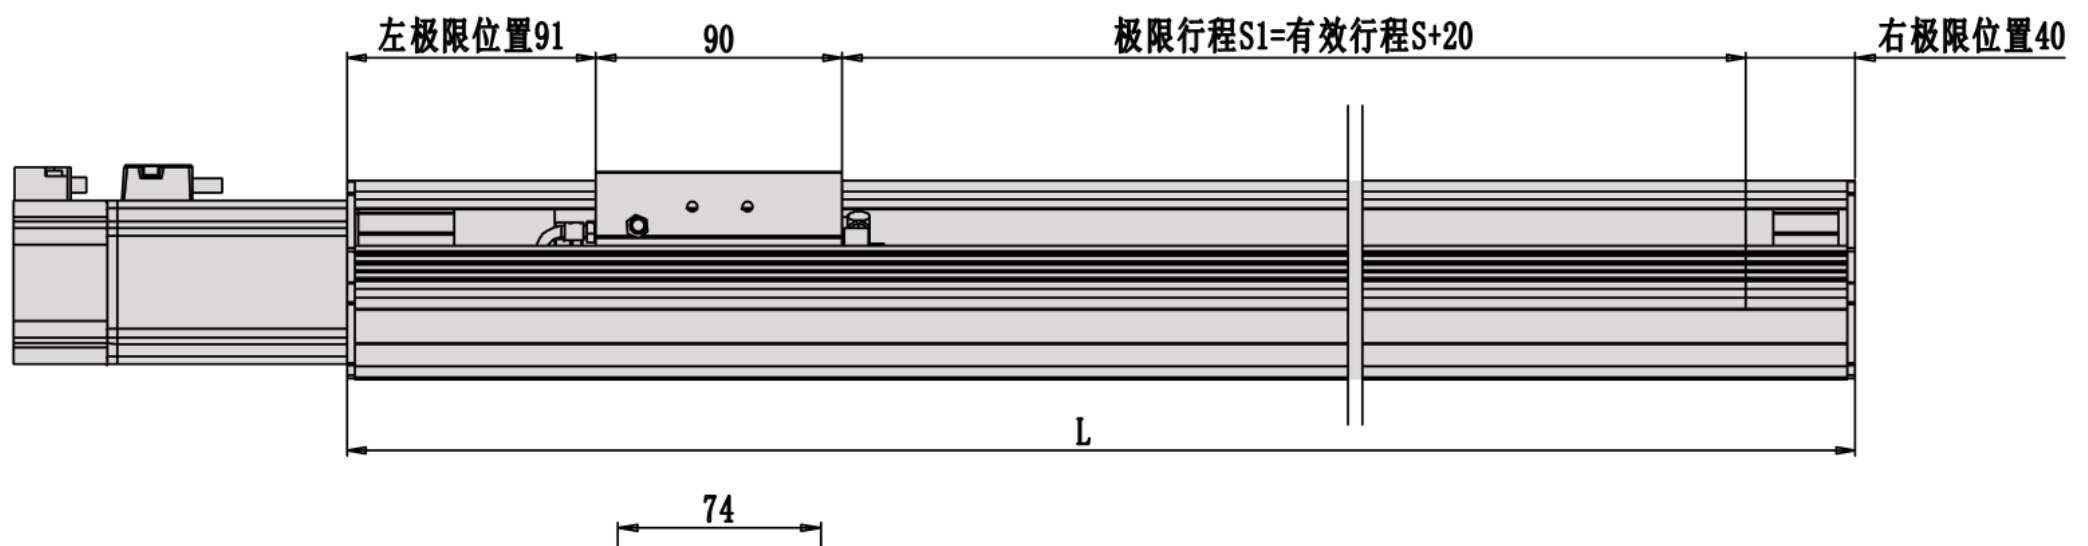


View 3

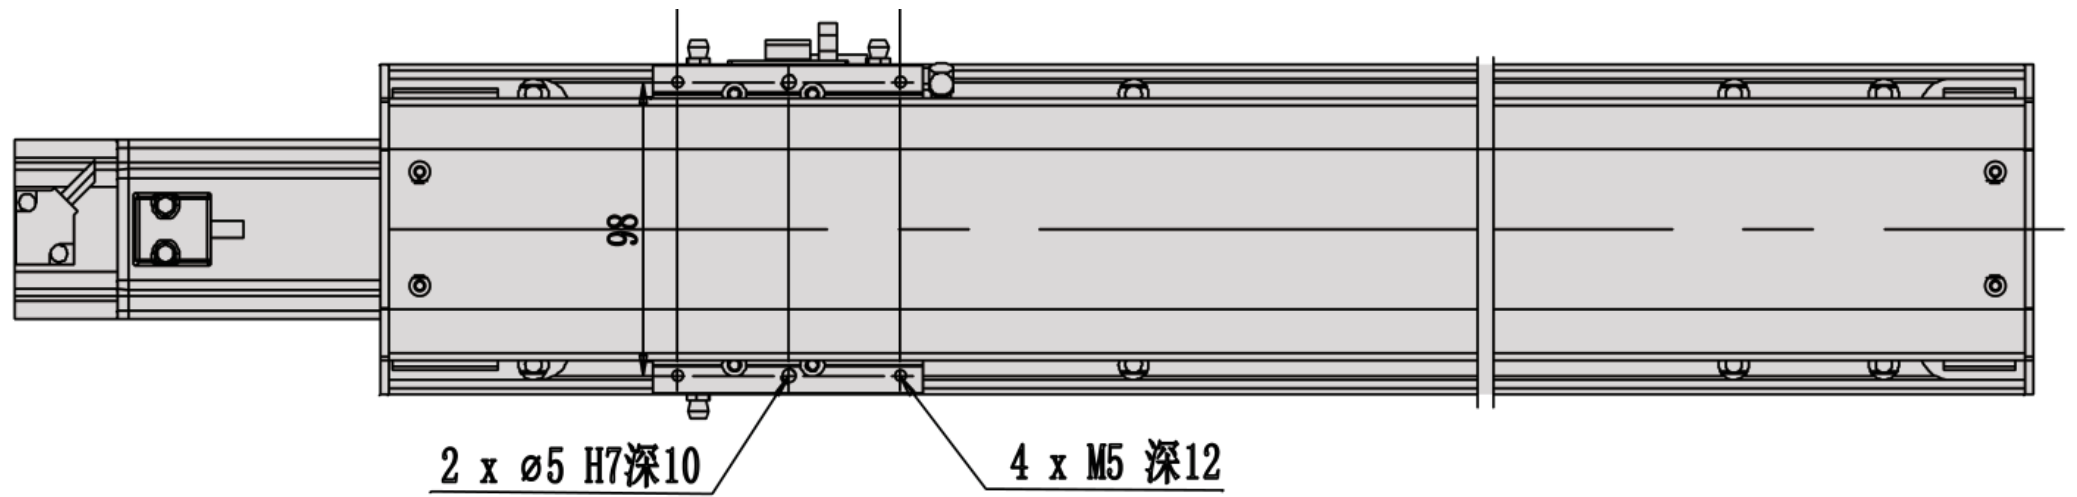


MF11 / C outside

Section Flange

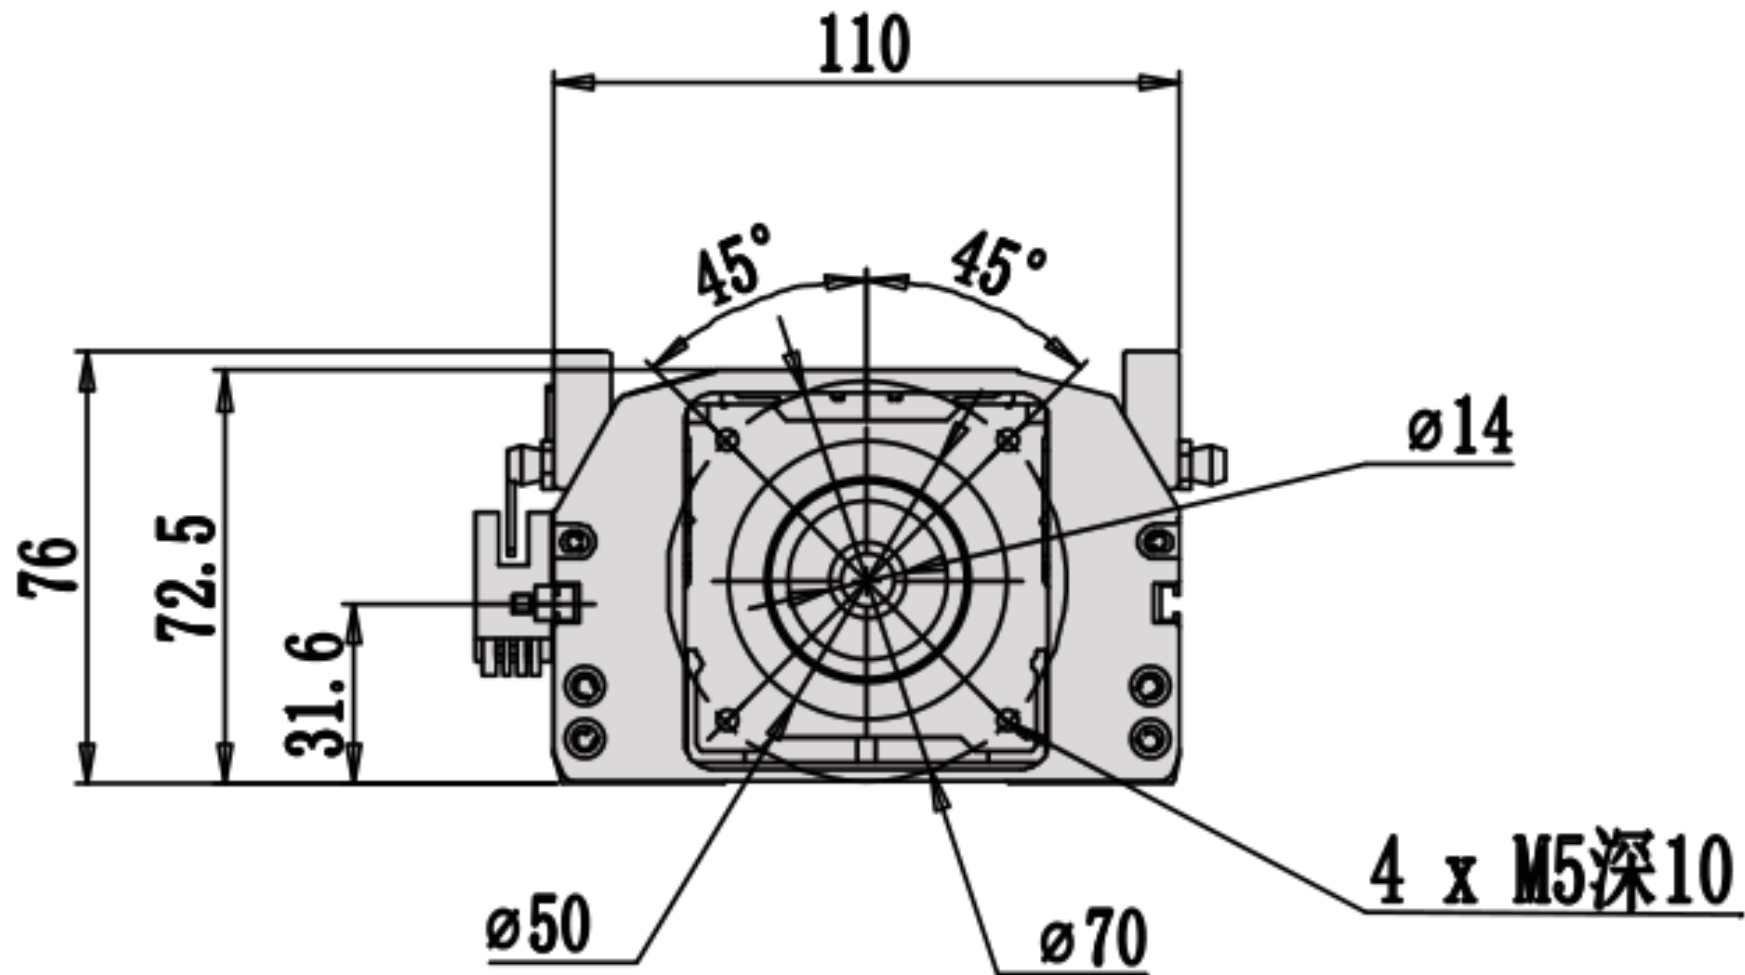


MF11 / C outside

Installation overview

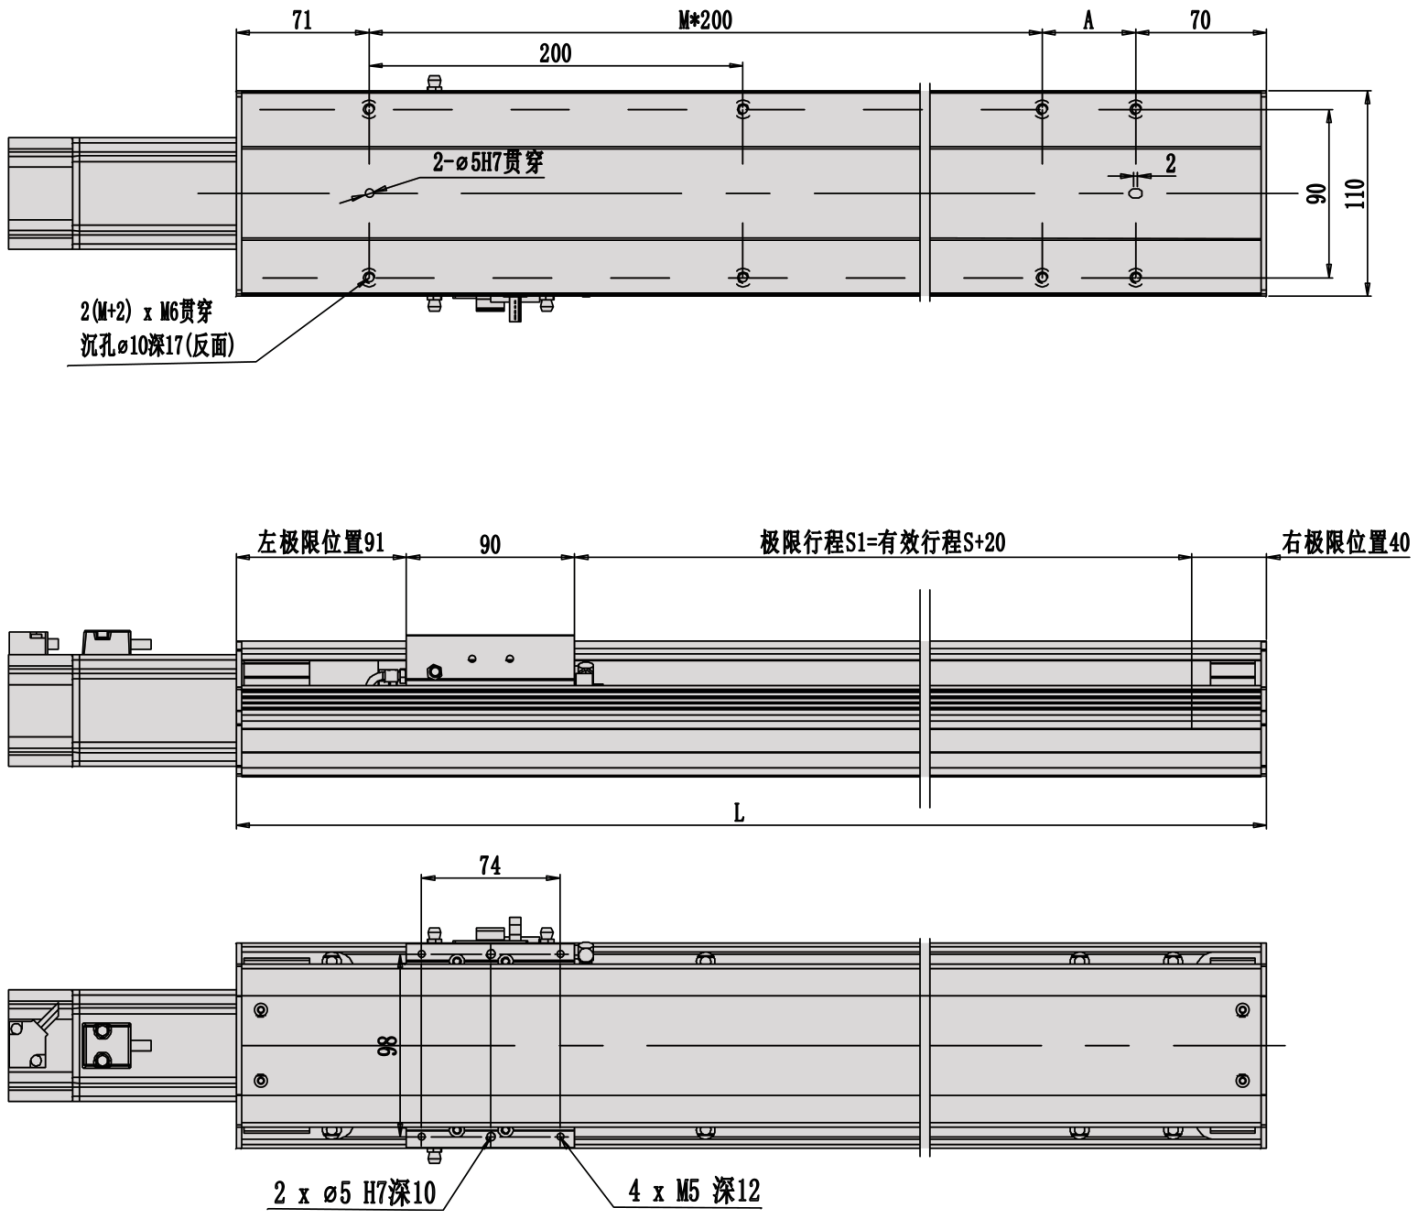


MF11 / D inside


View 1

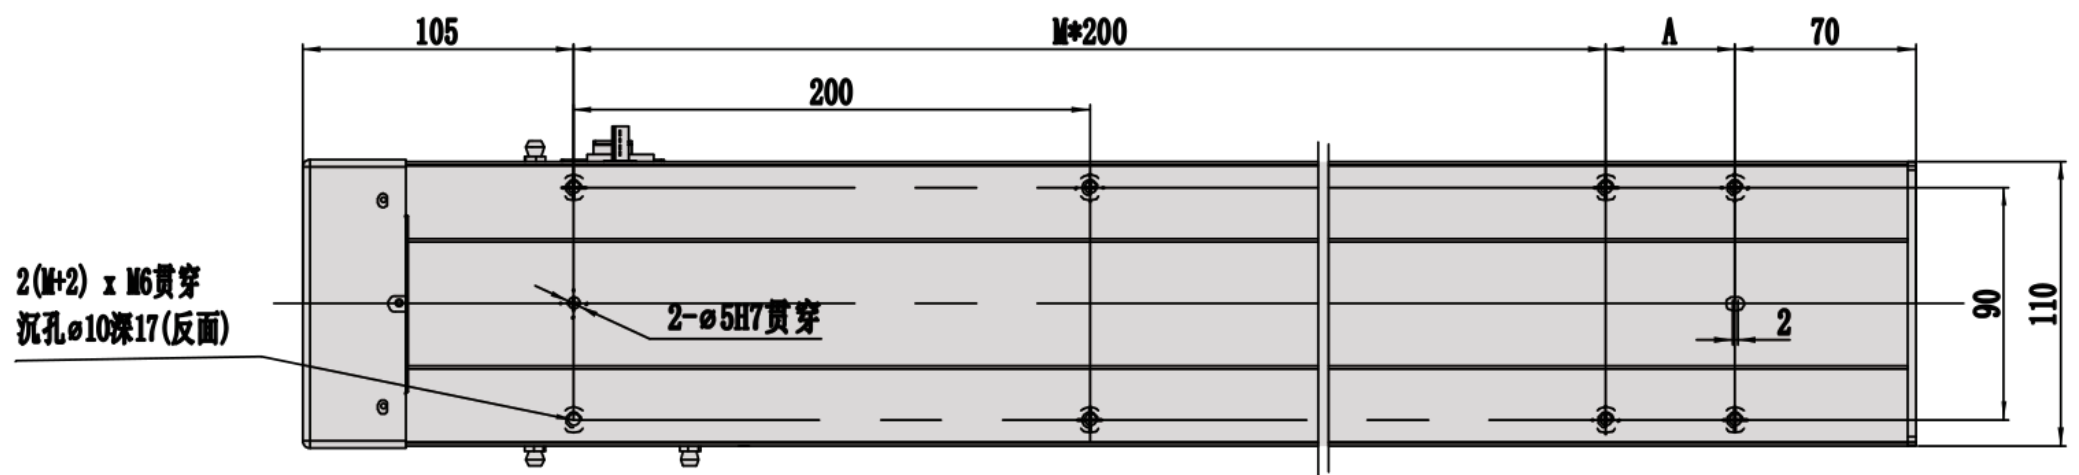

View 2

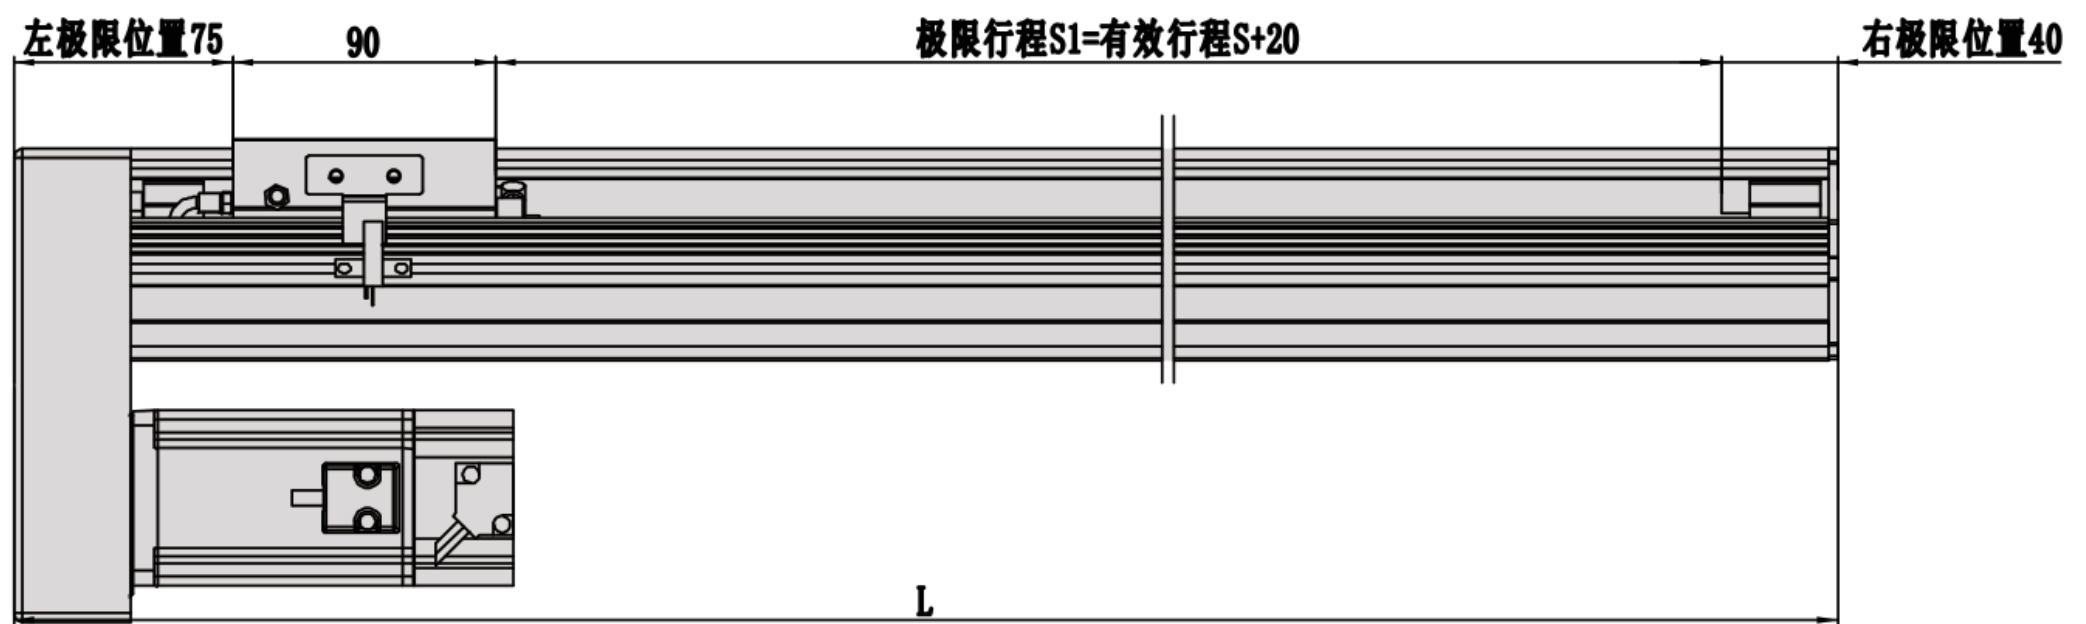


View 3

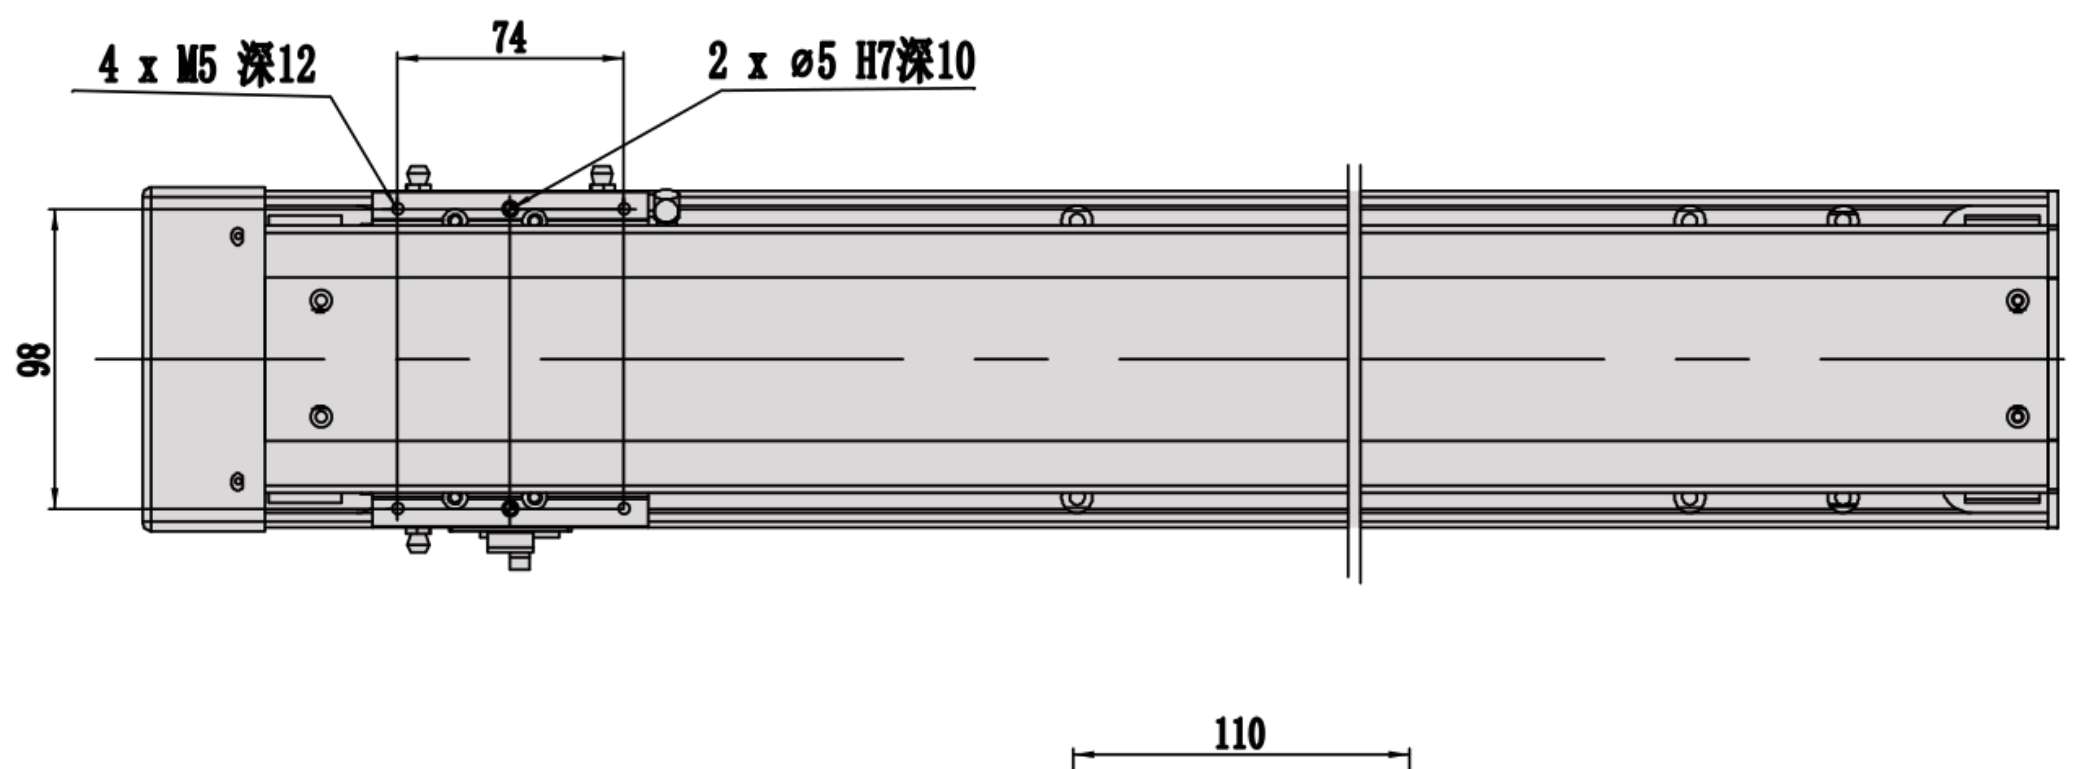


MF11 / D inside

Section Flange

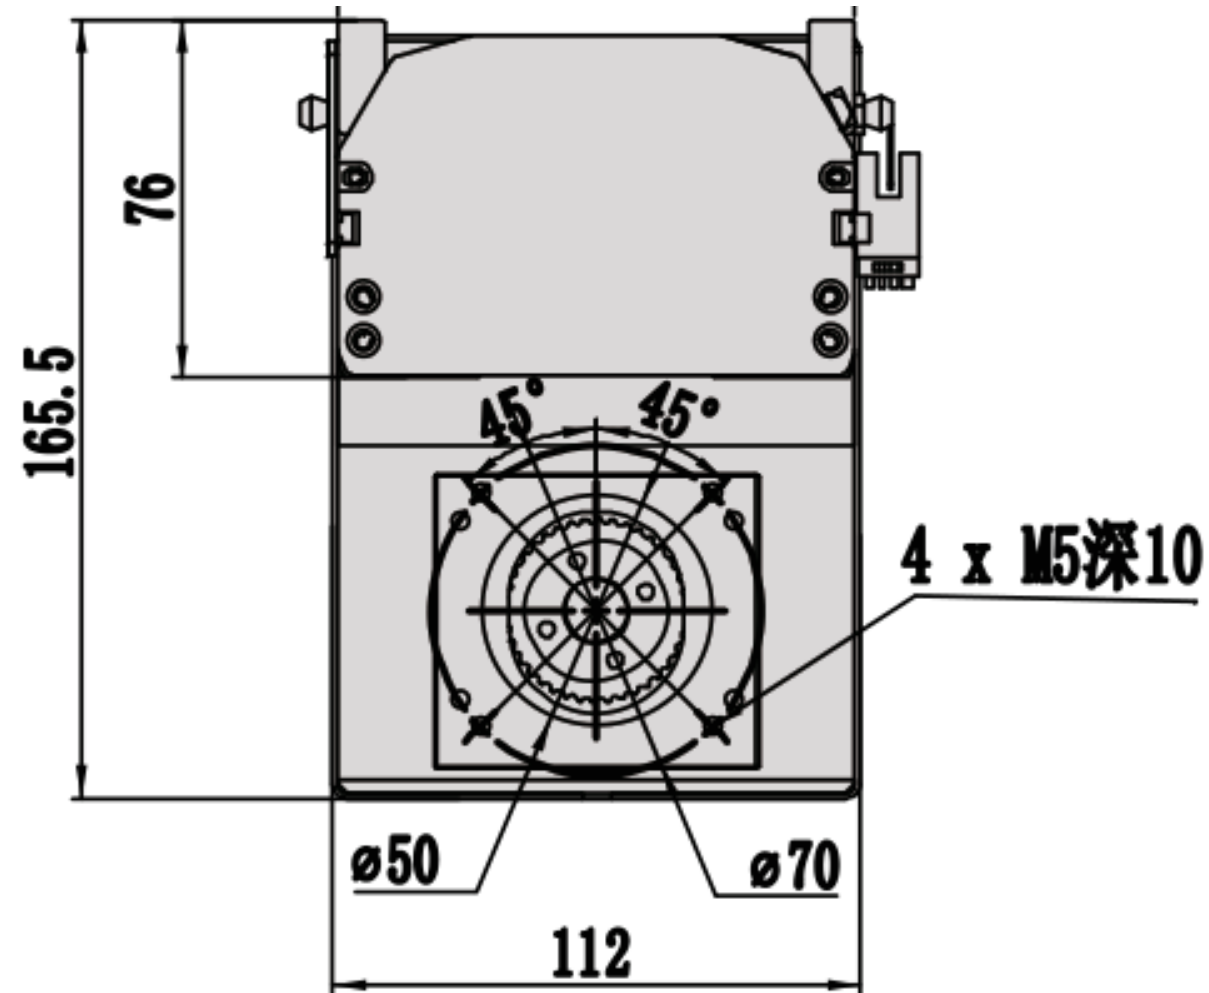


MF11 / D inside

Installation overview

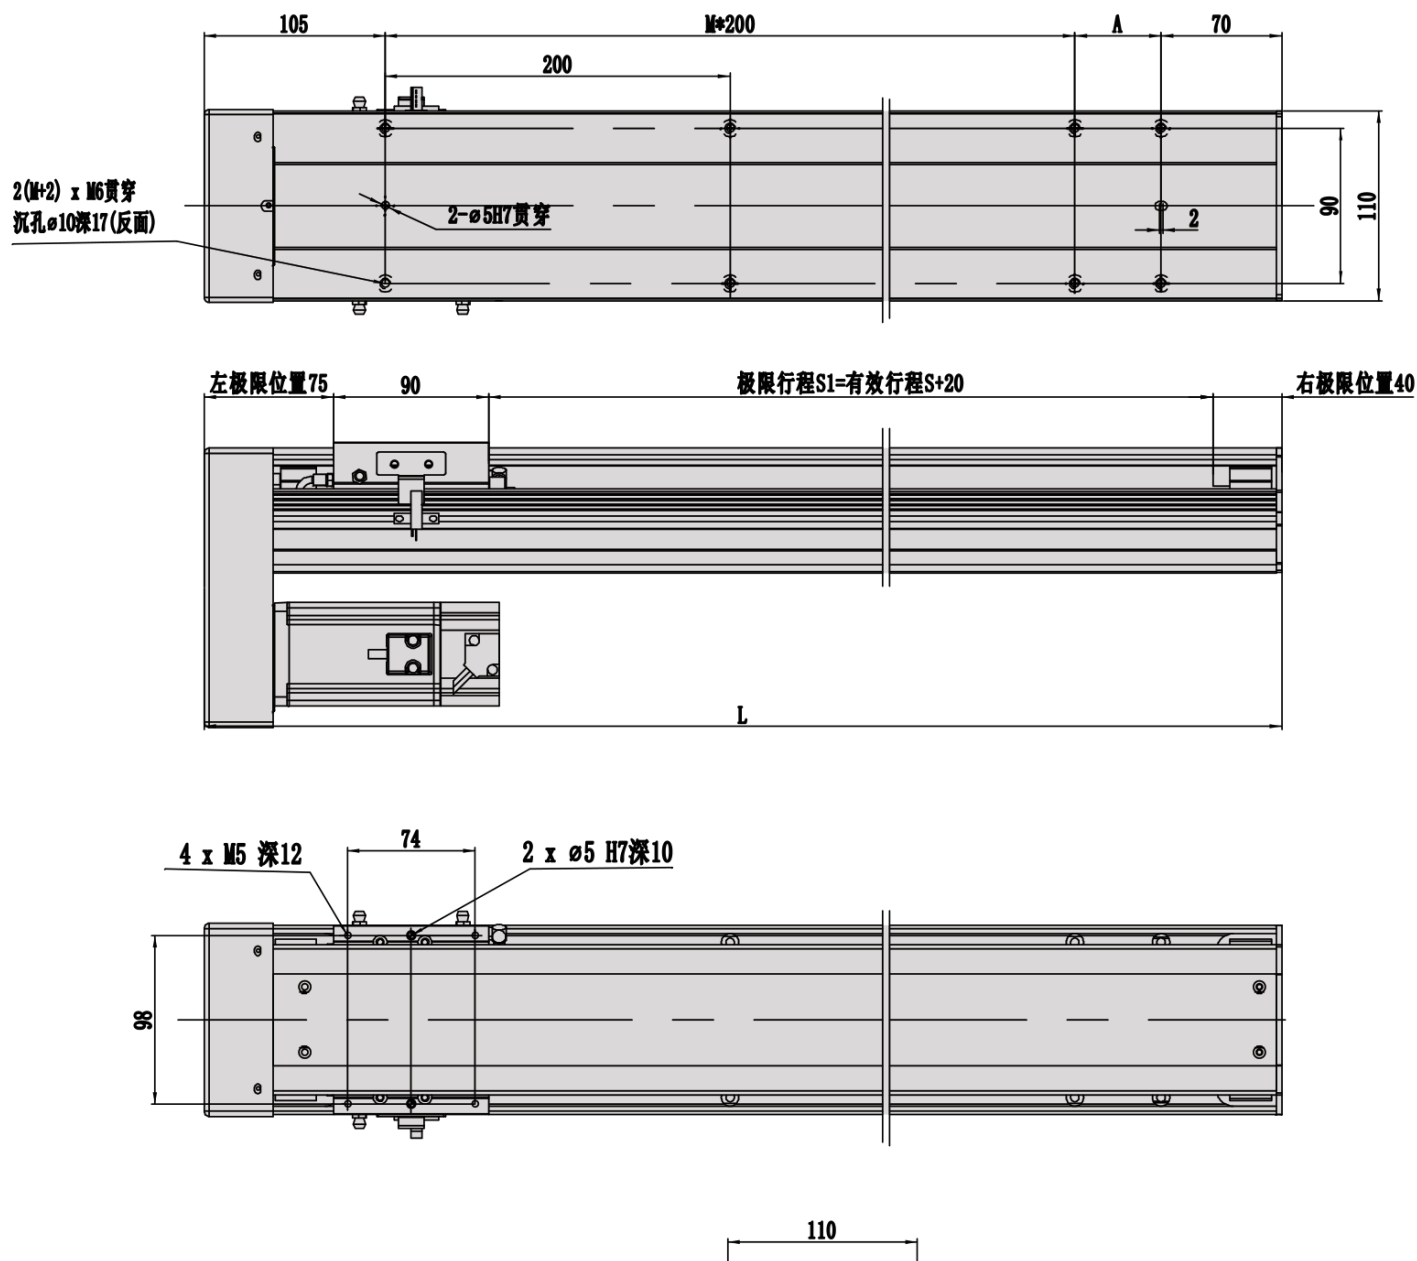


MF11 / L left


View 1

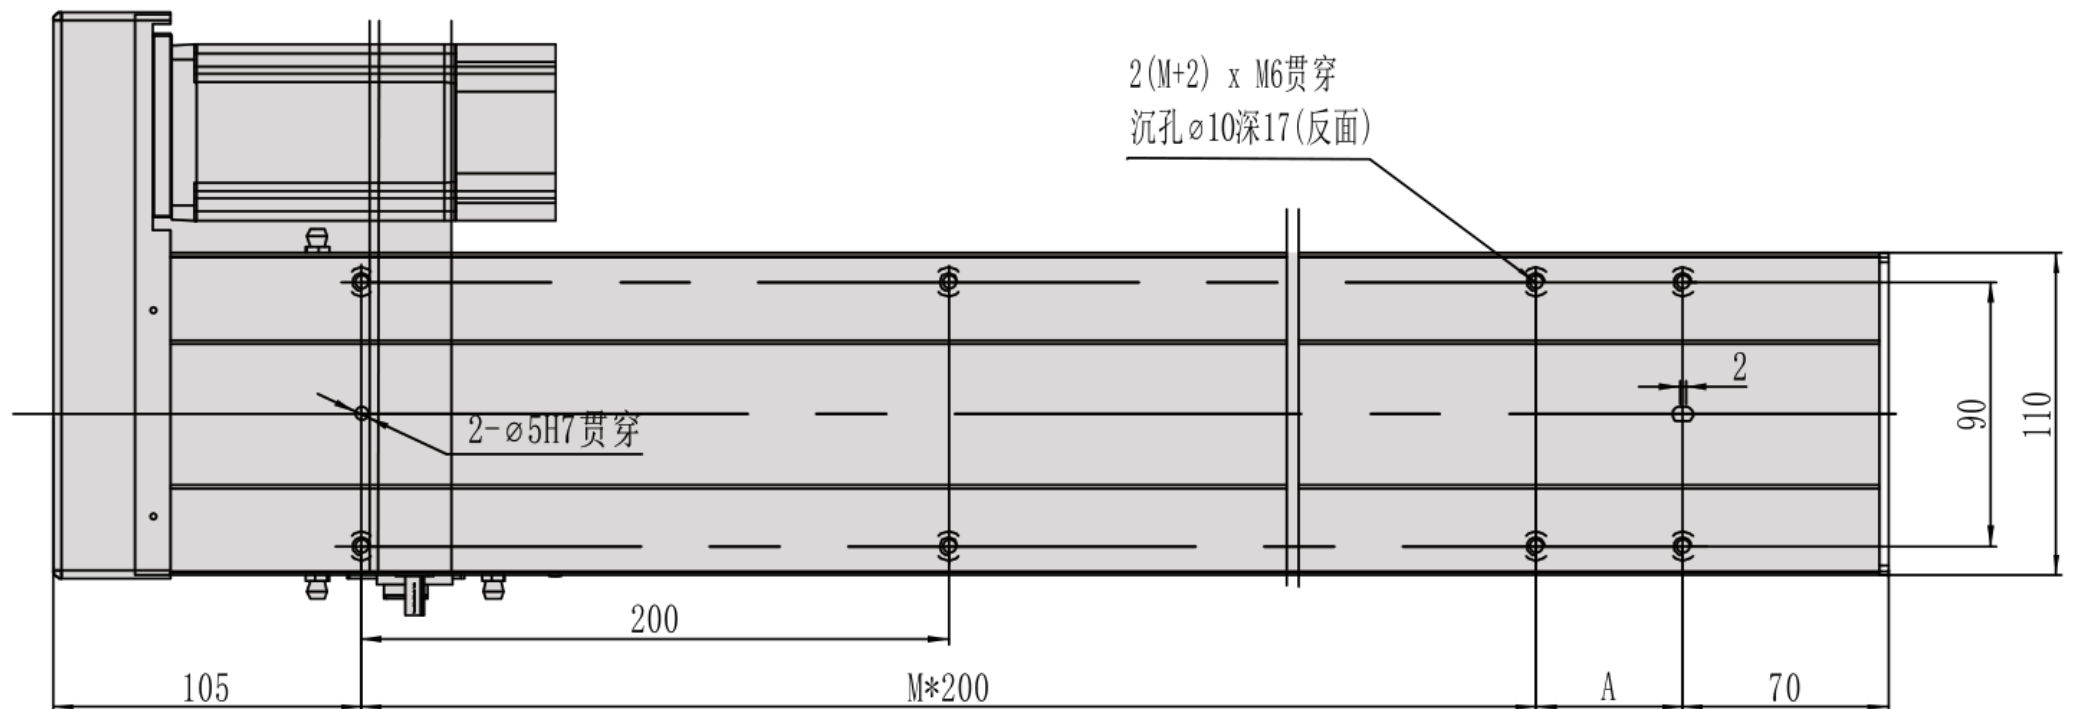

View 2

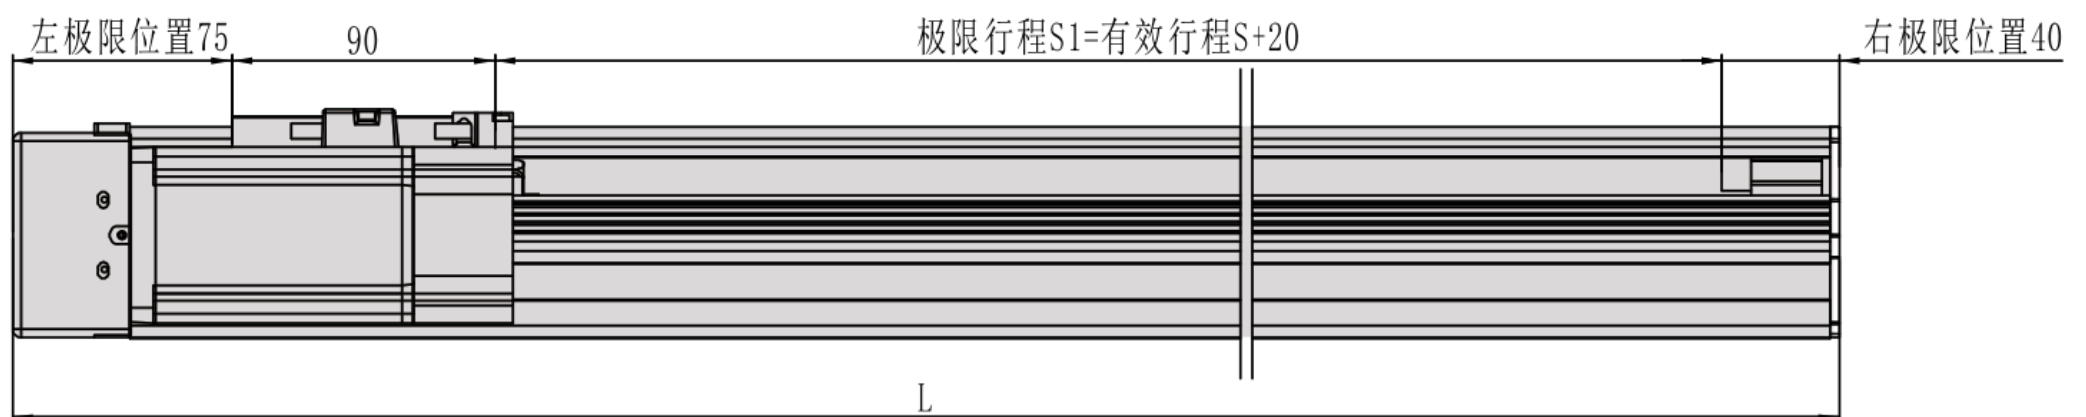


View 3

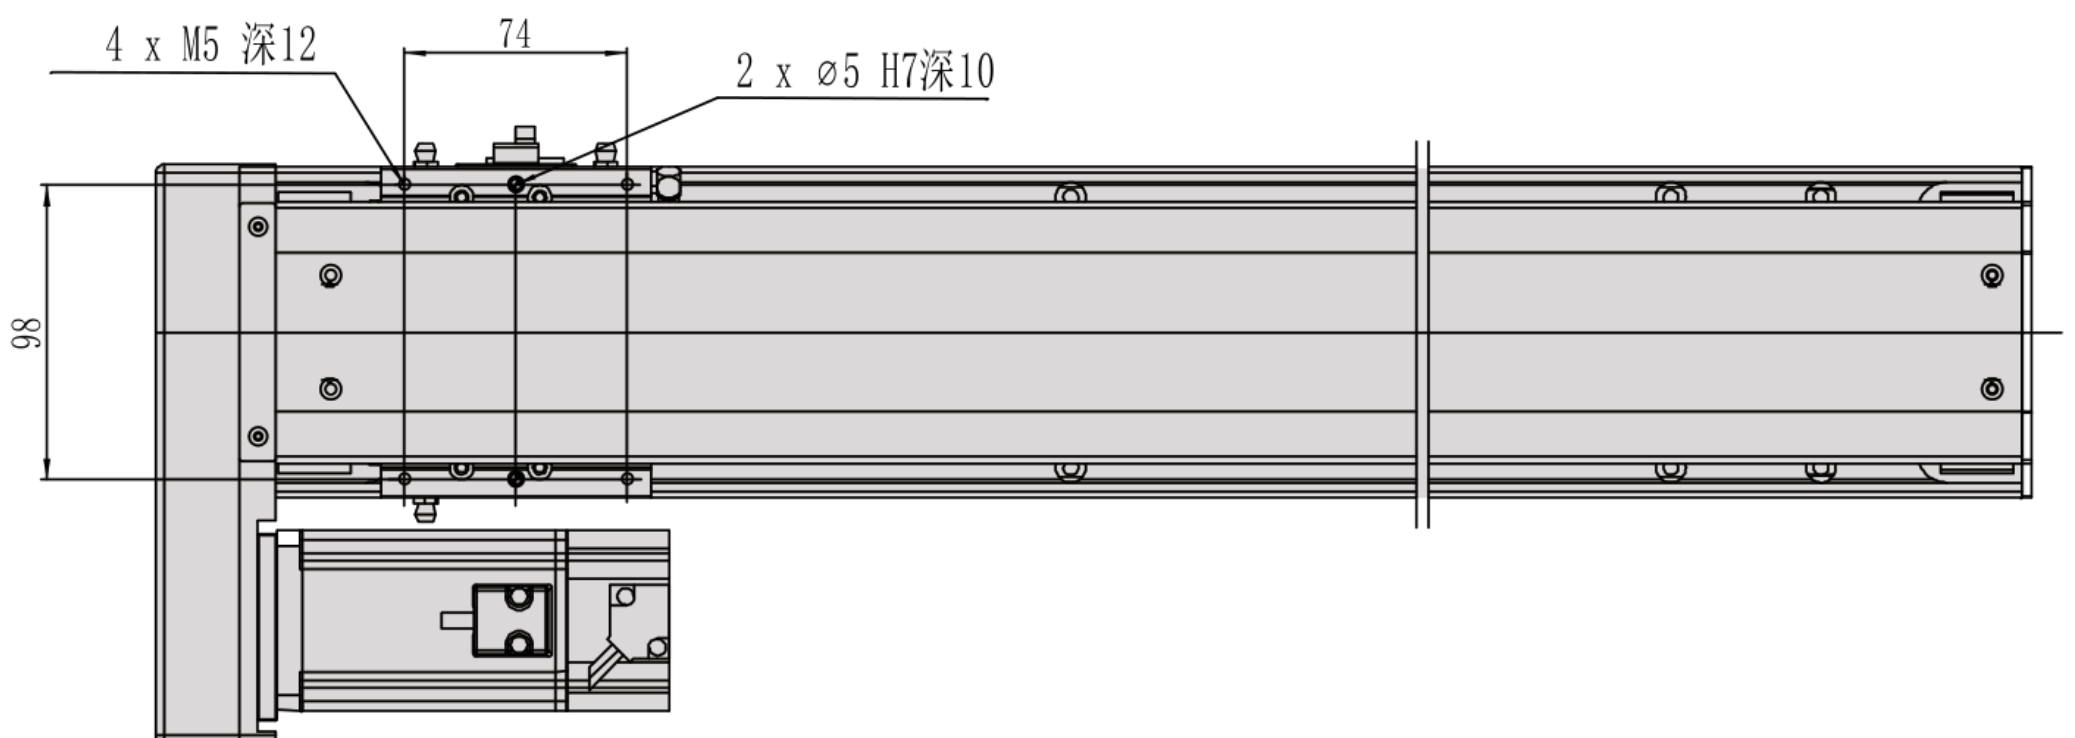


MF11 / L left

Section Flange

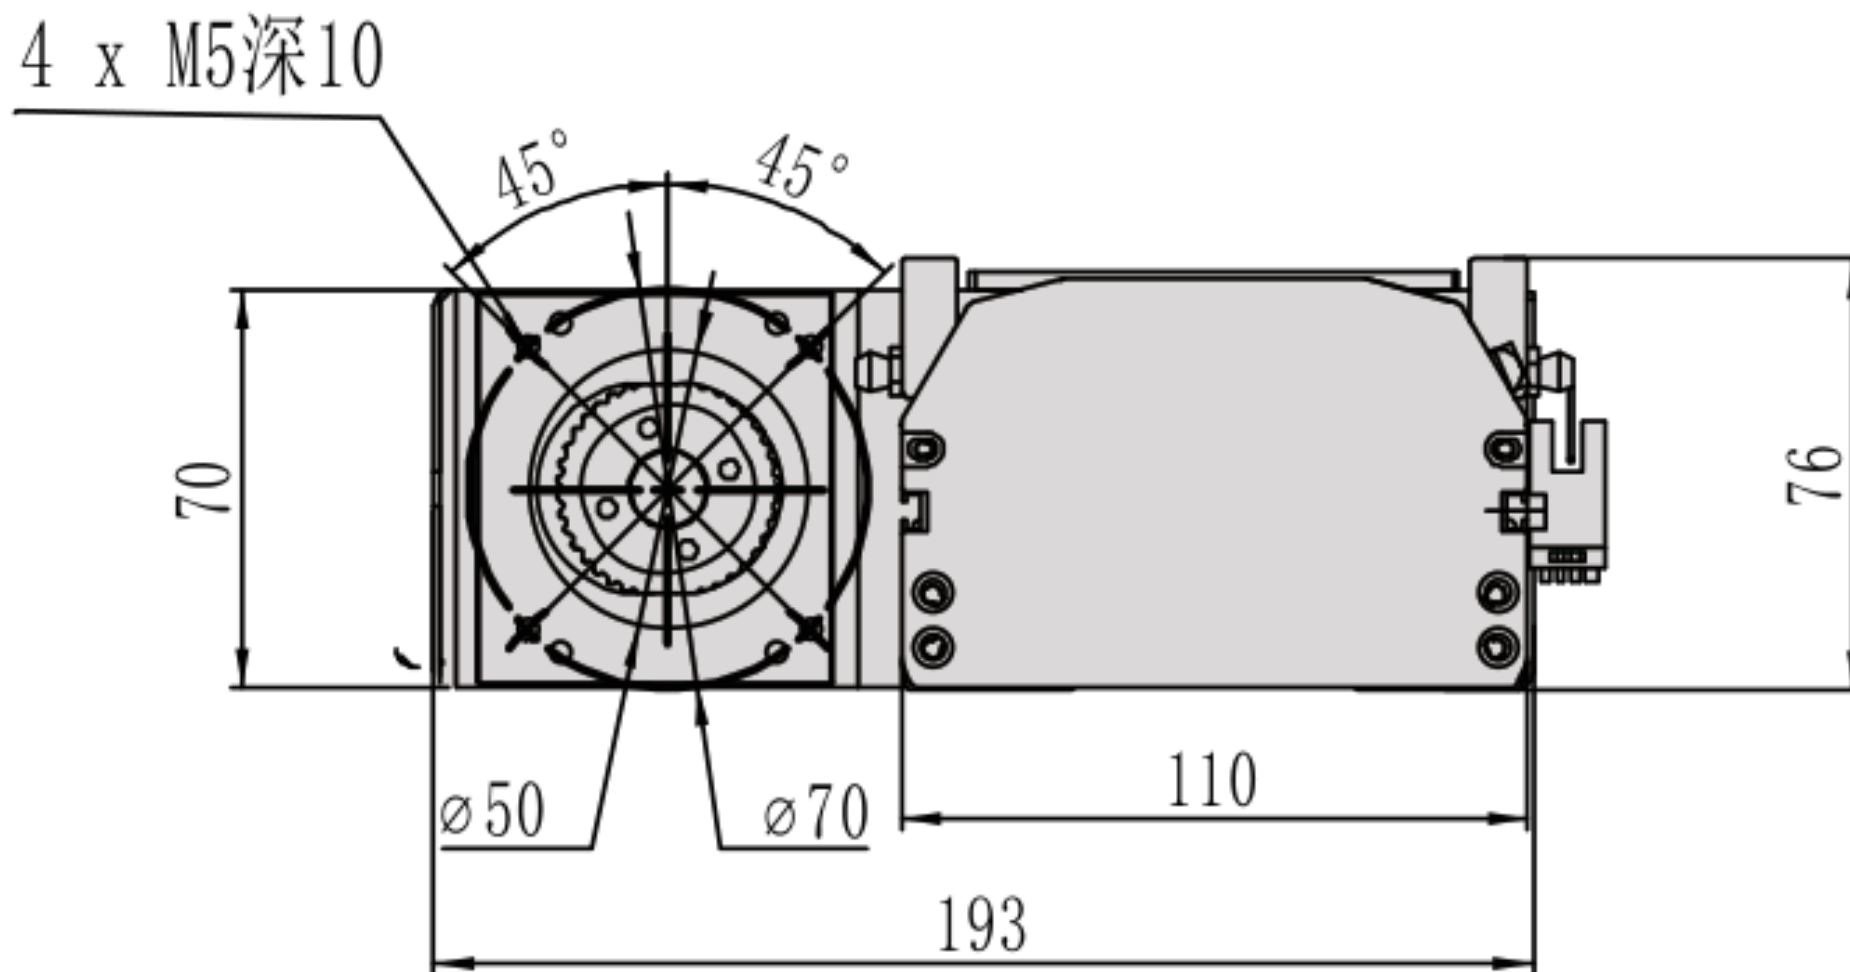


MF11 / L left

Installation overview

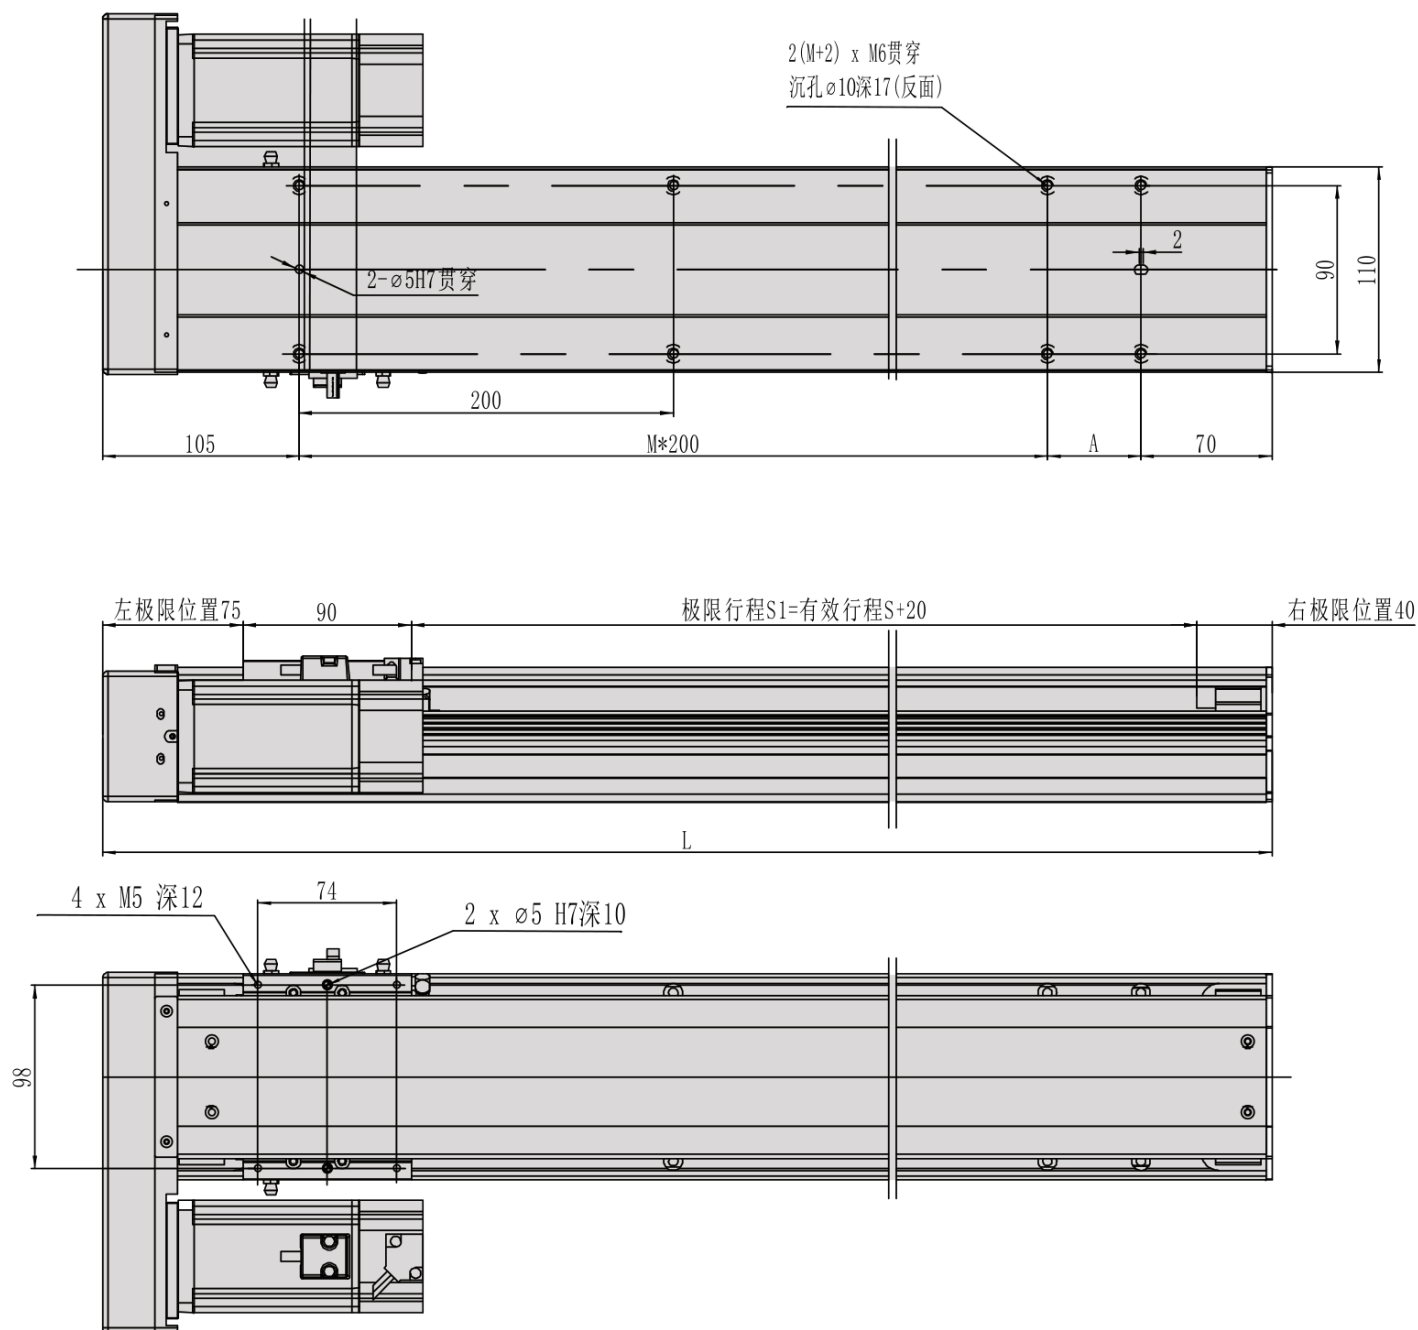


MF11 / R right


View 1

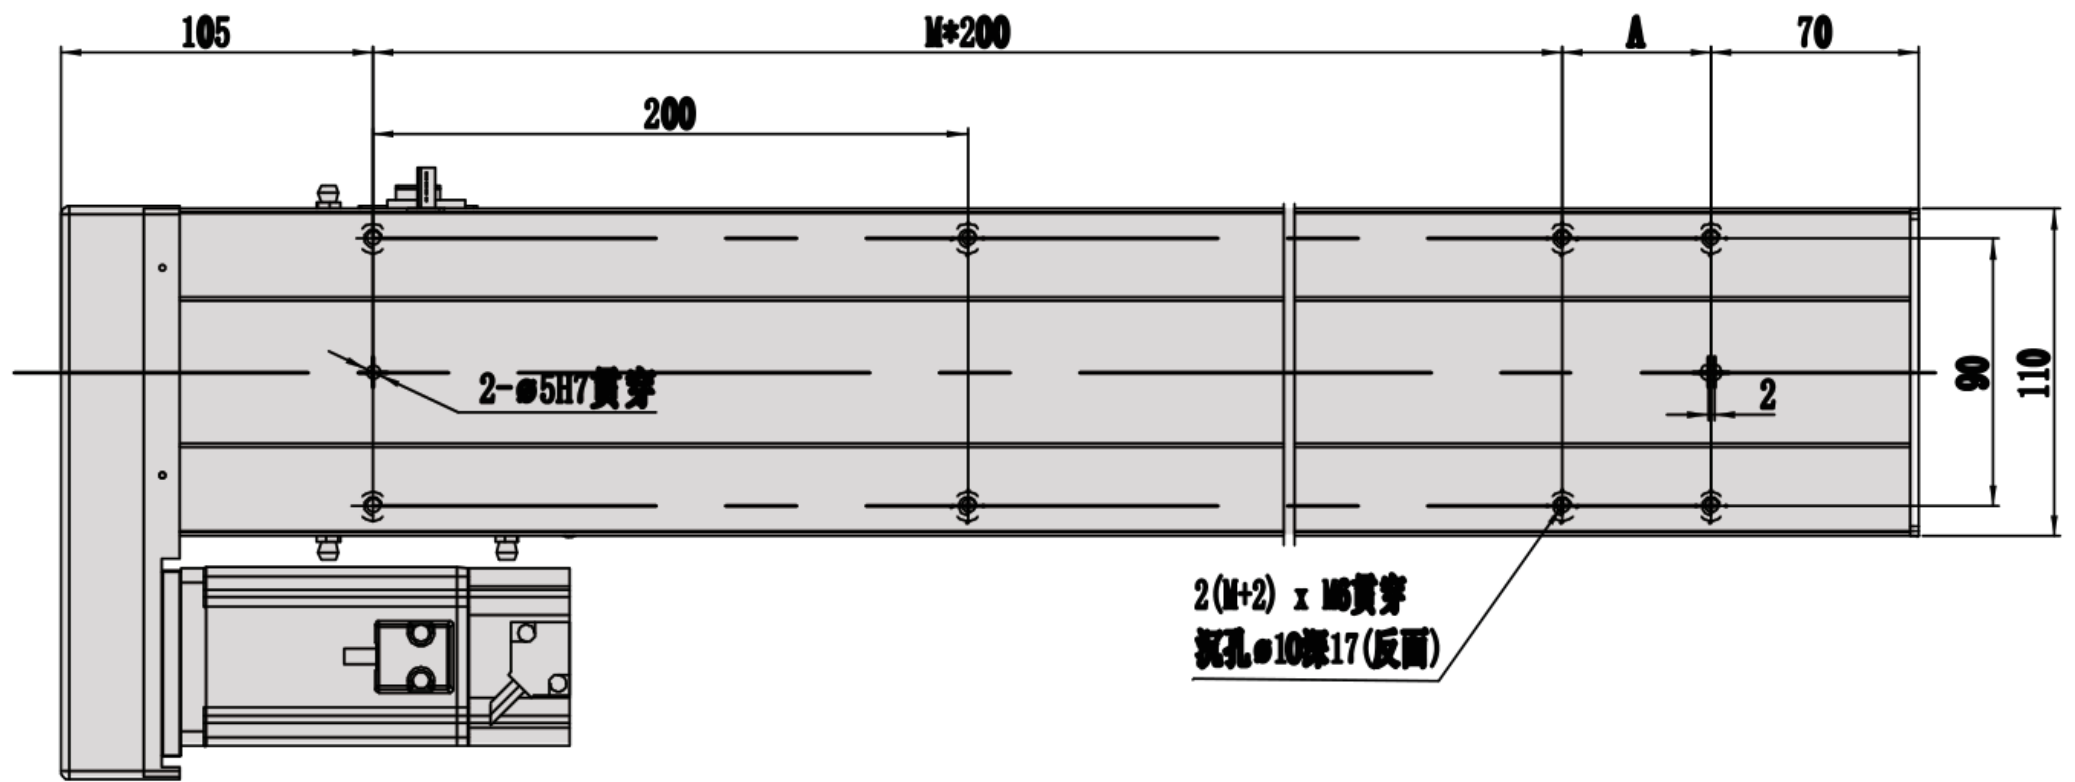

View 2

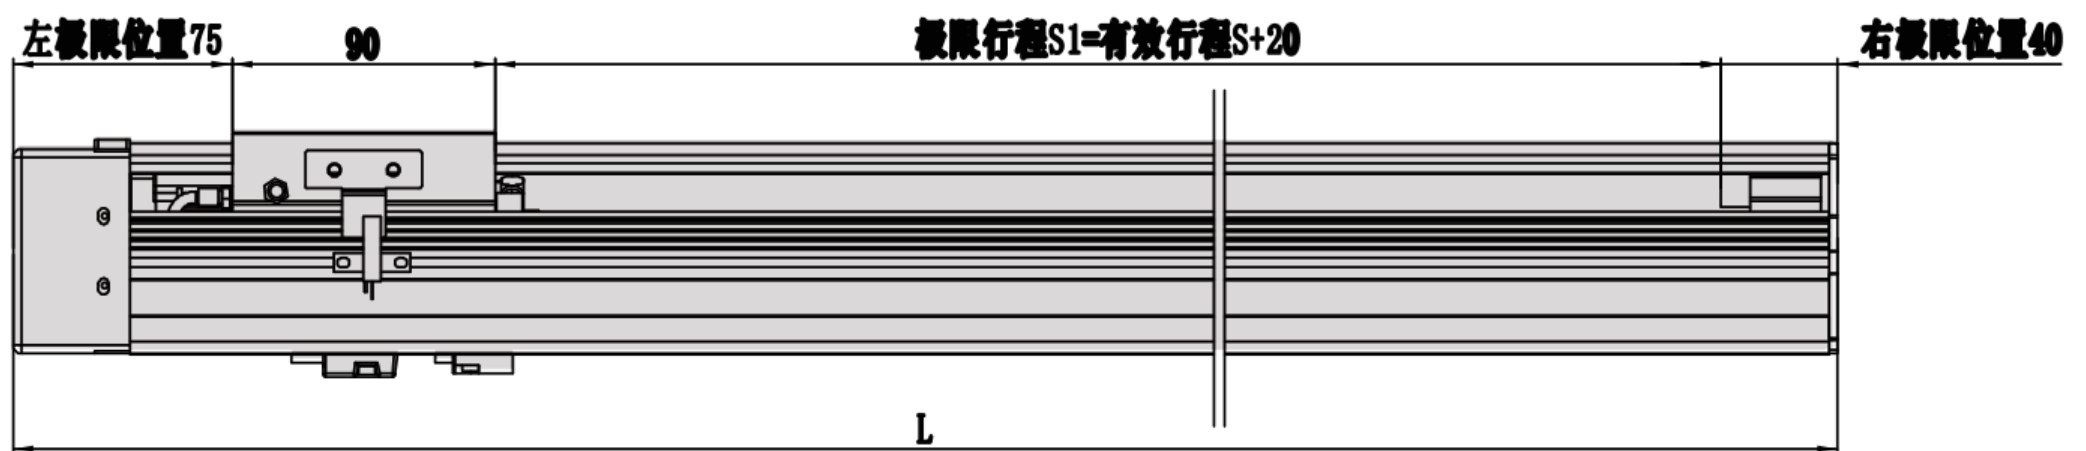


View 3

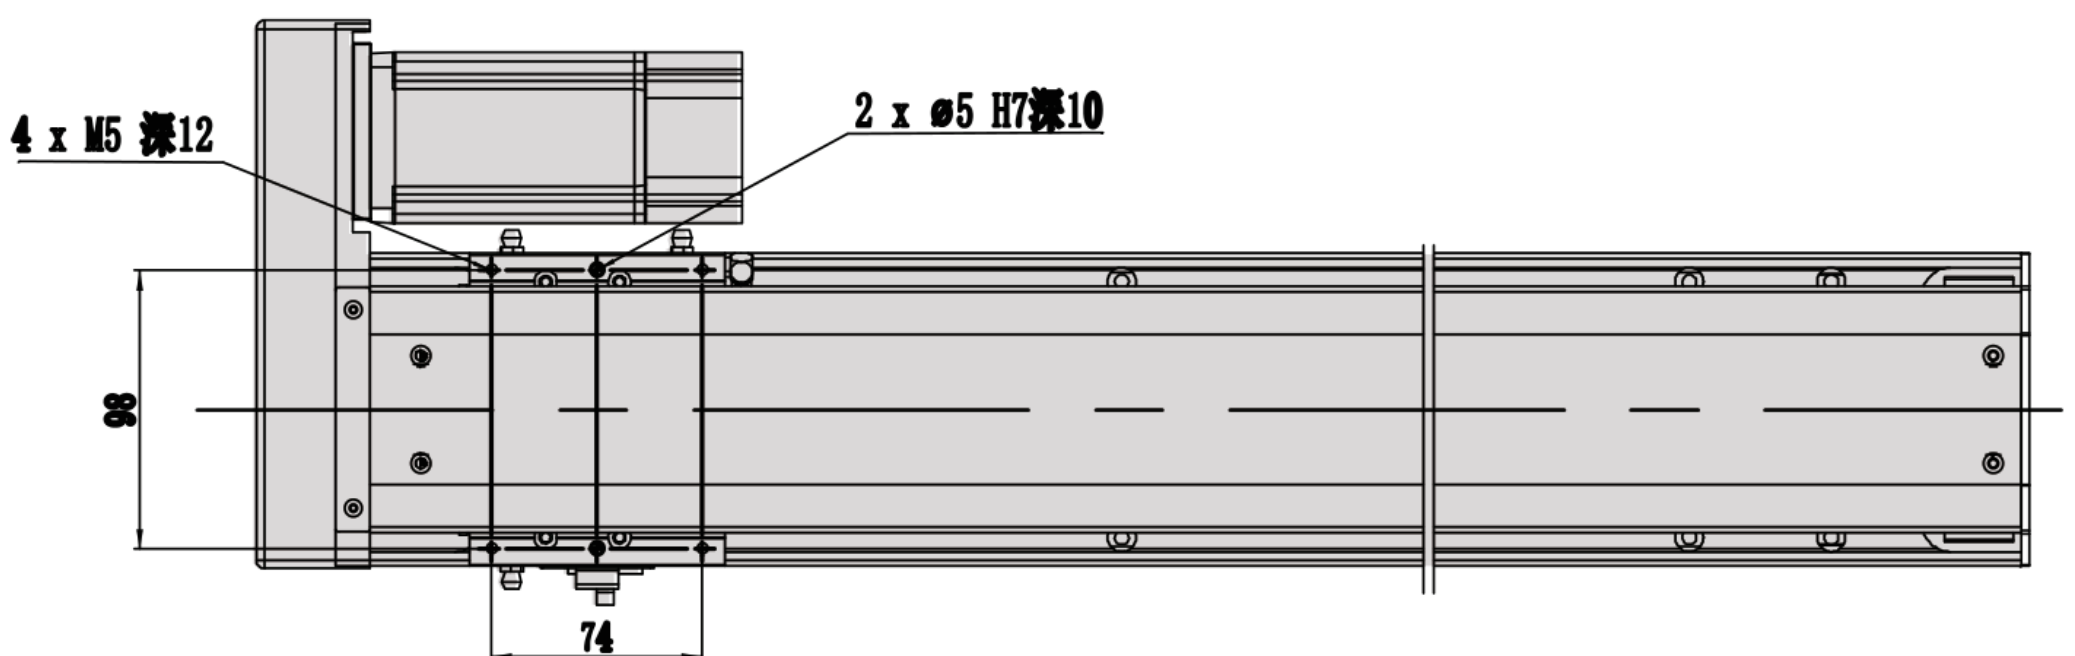

MF11 / R right

Section Flange

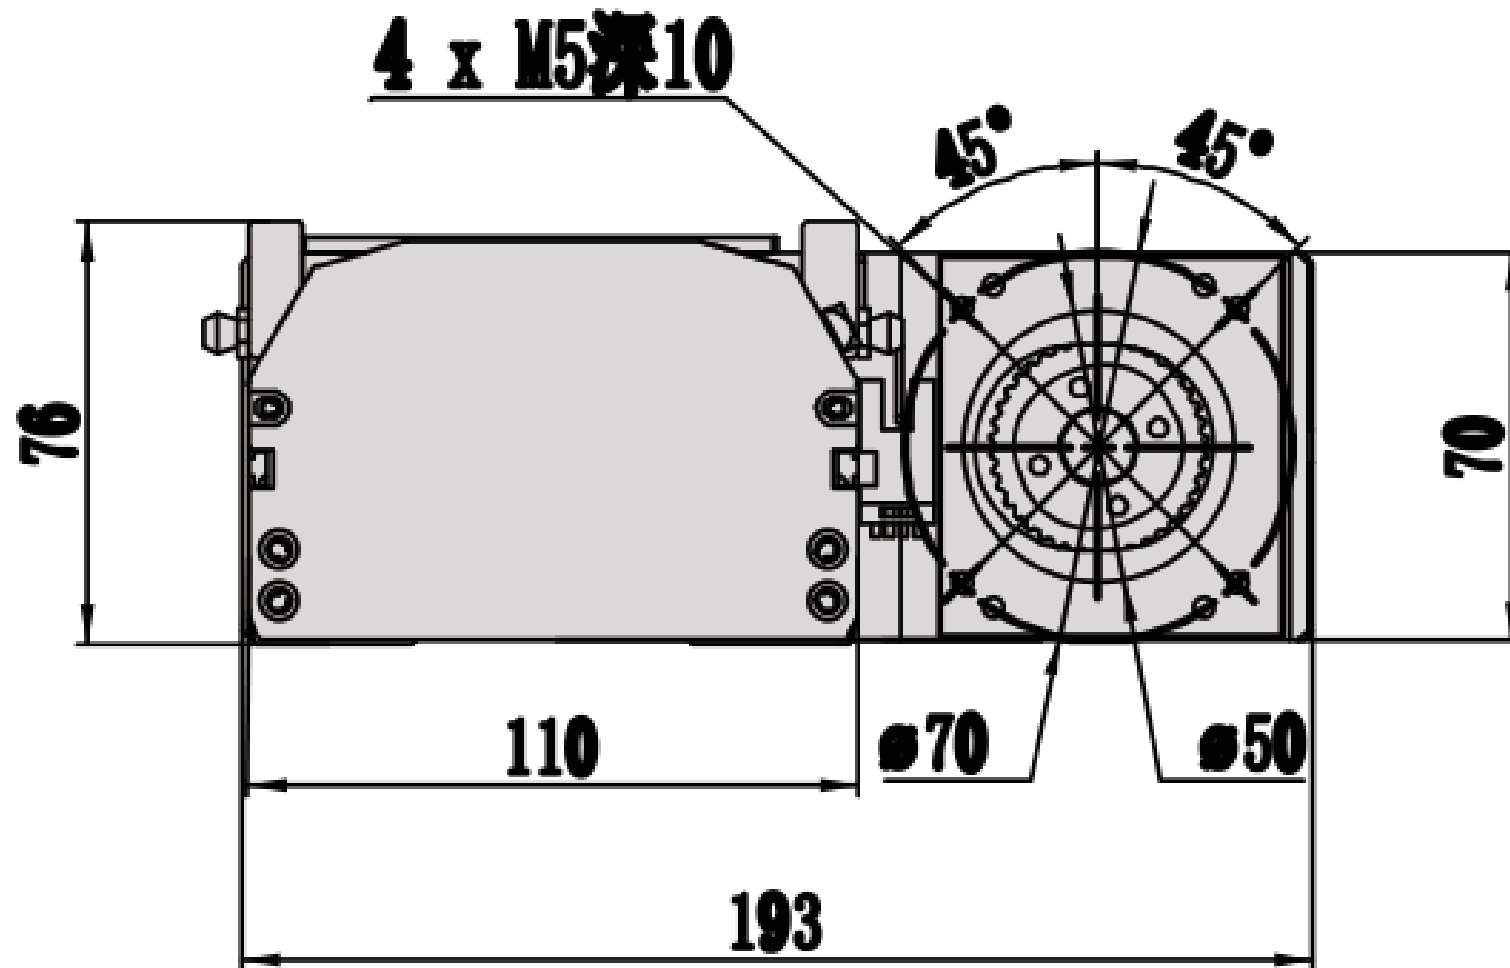

MF11 / R right

Installation overview

