

LM-FI08 drawing views

Use the labelled dimensions and conditions. Do not scale the drawings.

01 Dimensions

02 Wiring, PNP

03 Wiring, NPN


CONTACT HTROBOT

emmy@htrobot.com

www.htrobot.com

LM-FI08 - Dimensions


Do not scale the drawing.

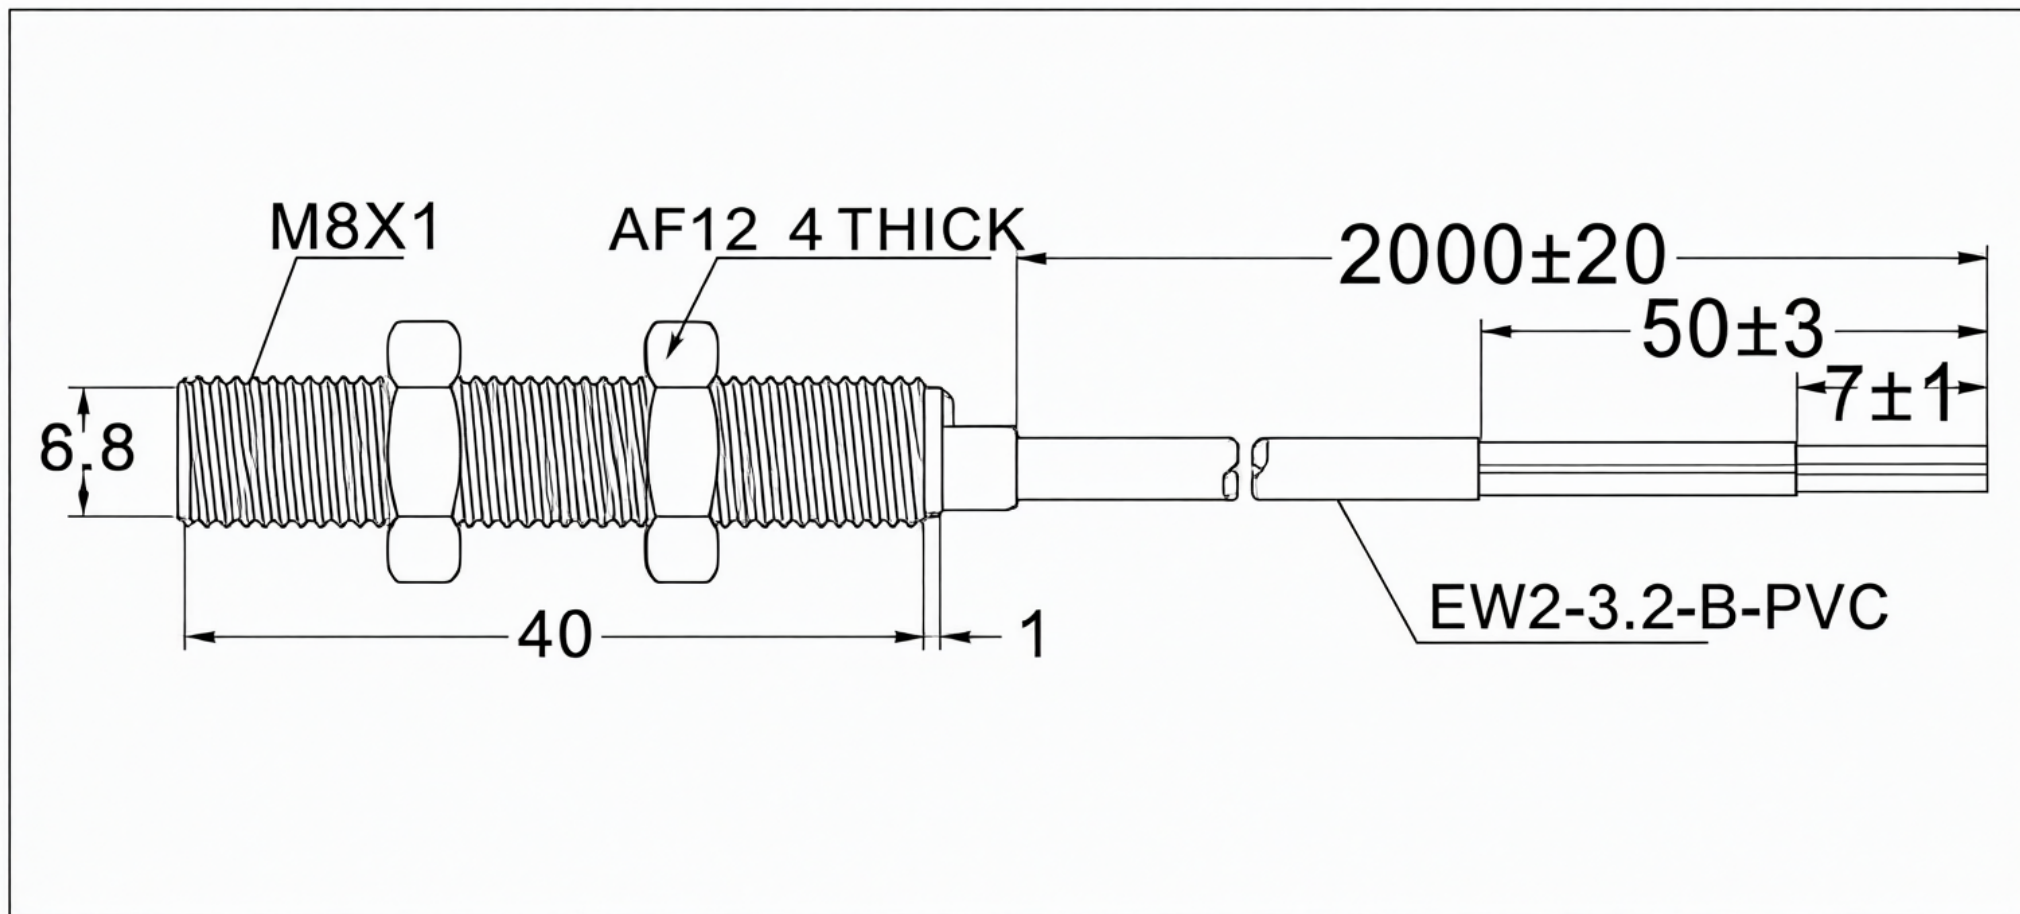

LM-FI08 - Wiring, PNP

Do not scale the drawing.

PNP Wiringdiagram

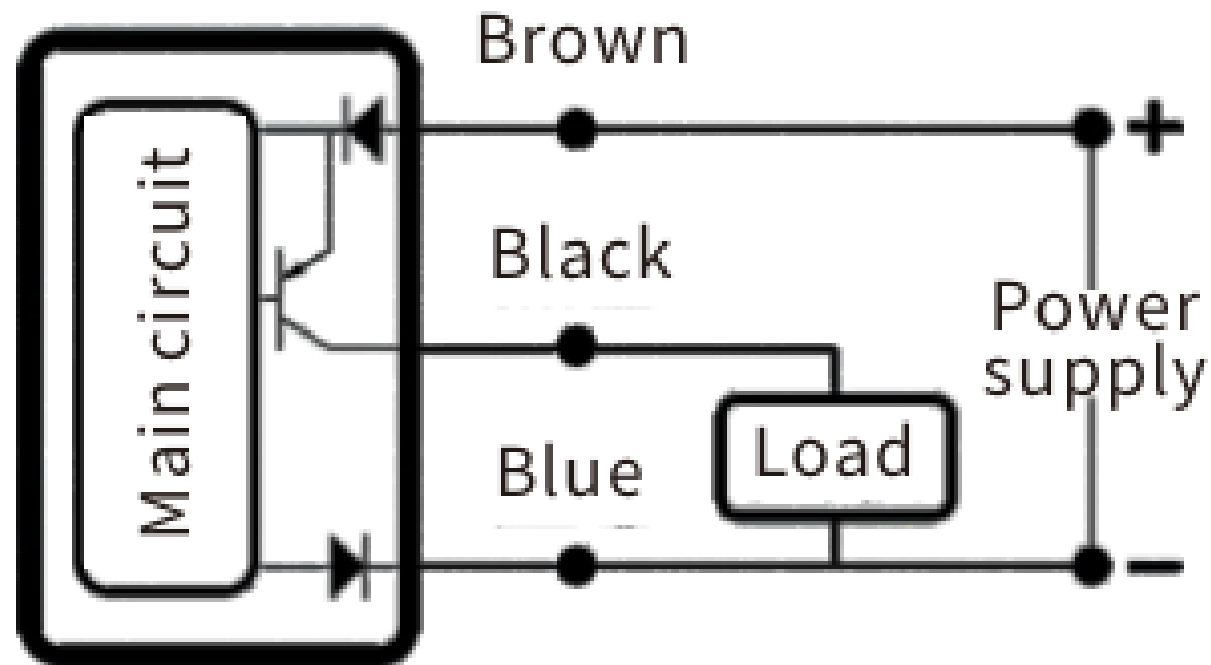

LM-FI08 - Wiring, NPN

Do not scale the drawing.

NPN Wiring diagram

