




SL100 dimensions

Dimensions and installation views. Units are the labels printed on each view.

These drawings do not select a stroke. Confirm mounting against the configuration you order.

Drawings: 2 views. side without cover, end without cover

SL100 · Drawings · side without cover

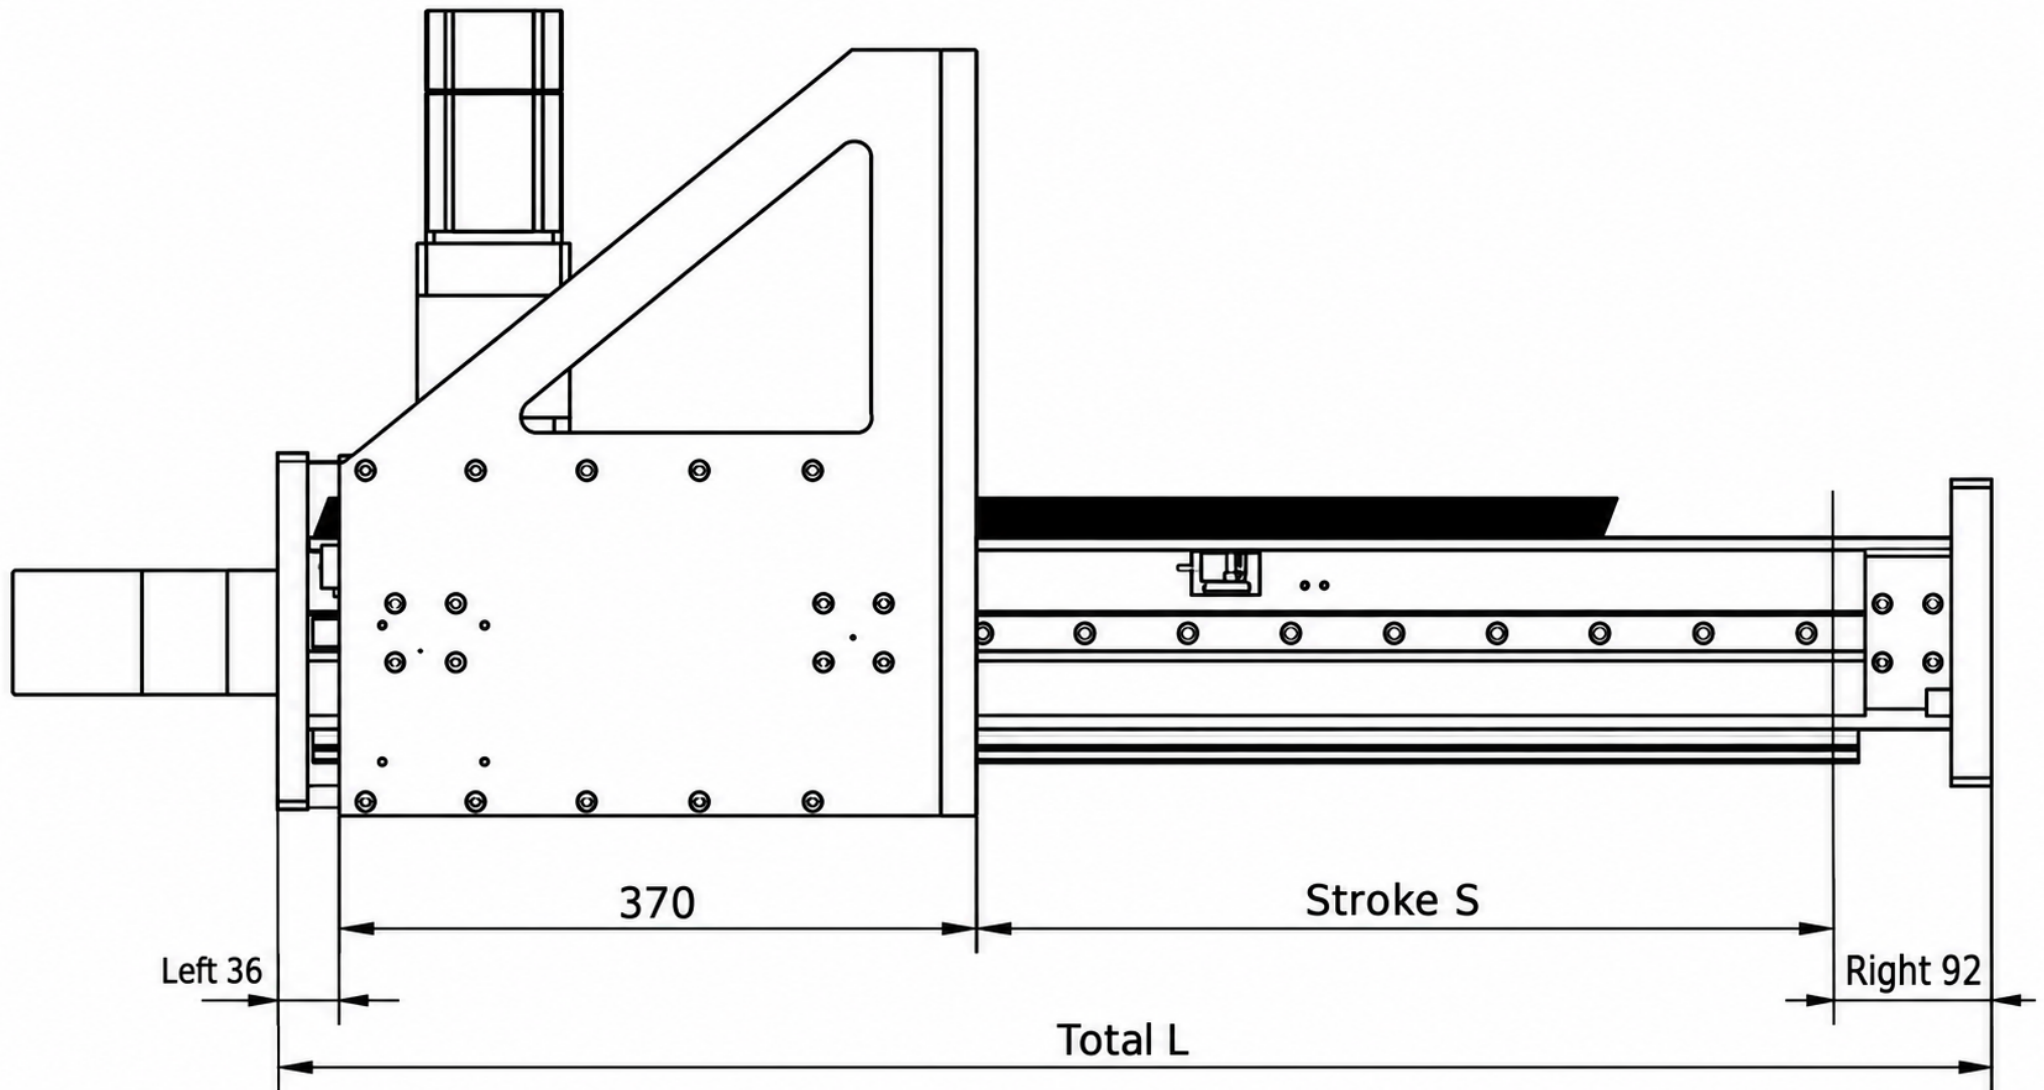

SL100 · Drawings · end without cover

