




SL80 dimensions

Dimensions and installation views. Units are the labels printed on each view.

These drawings do not select a stroke. Confirm mounting against the configuration you order.

Drawings: 2 views. end 1020, end 1022

SL80 · Drawings · end 1020

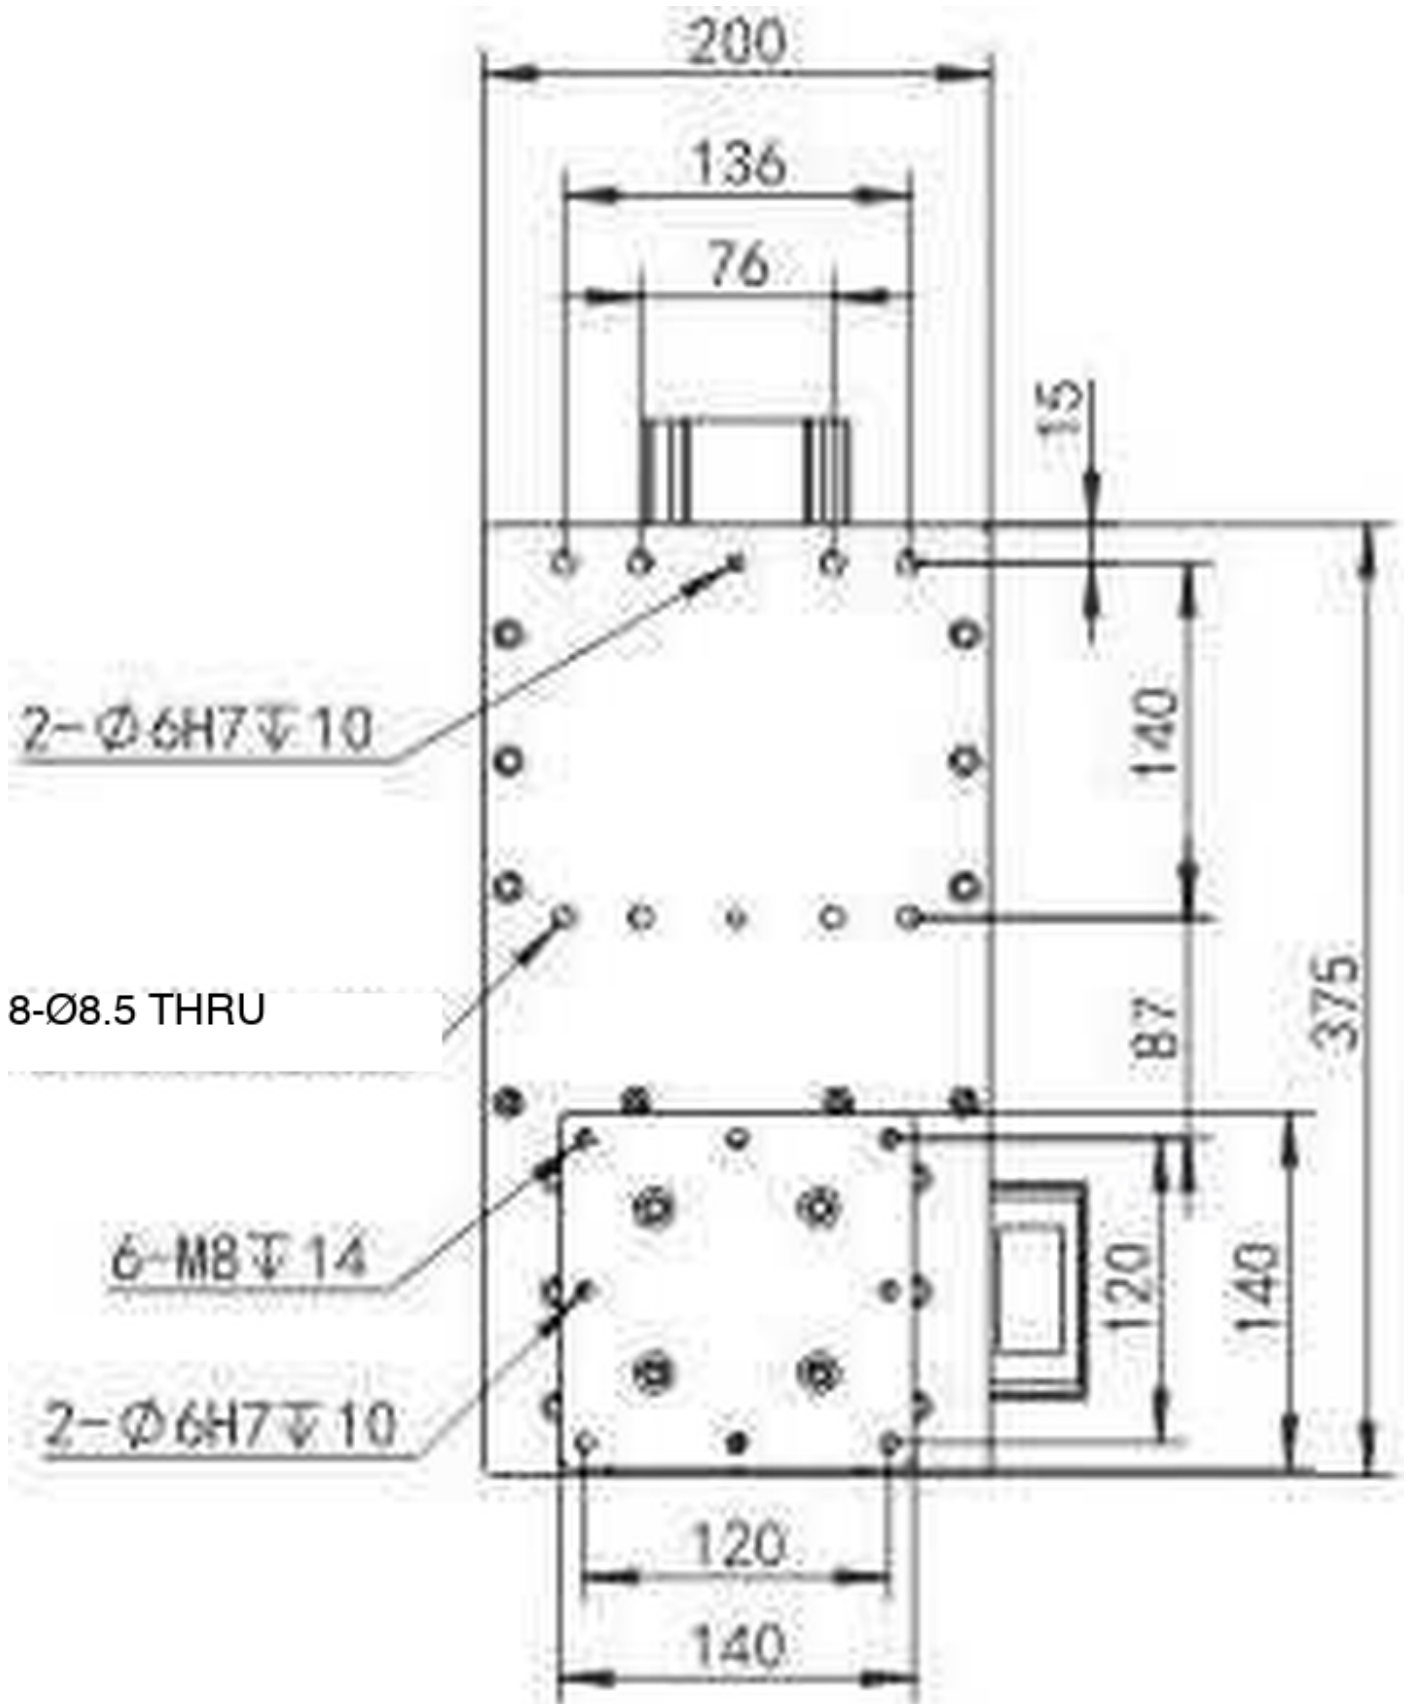

SL80 · Drawings · end 1022

